
Carina Small 86 Downlight

Installation / Maintenance Instructions

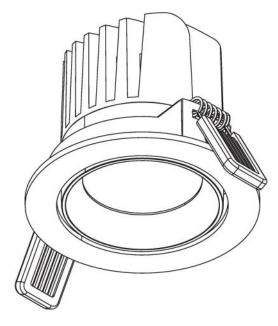

CAR86-DL

Precautions and Warnings

•Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use.

•Turn off the power suppler before installation and maintenance.

•Installation must be carried out be a trained professional in accordance with all National electrical' codes and regulations.

•To avoid the risk of fire and overheating, make sure all connection, including those made by others, are correct and secure.

•Do not pinch or apply excessive tension on the electrical wires. Damage due to improper handling and installation will void the warranty.

•If any there is any damage to the product or the cable, the product must be returned to the retailer or manufacturer.






Luminaire Details

Power Supply:	230V AC 50Hz
IP Rating:	IP20
Class:	
Ta Max:	45°C

Fixing Method:	Spring clip
Bezel Diameter:	86mm
Recess Depth:	70mm
Ceiling cutout	75mm
Ceiling Thickness range:	1-15.5mm


Light Forms UK Head Office	LightForms.com	8 Richfield Avenue Reading RG1 8EQ	T +44 (0)20 8571 3785 E London@ LightForms.com
Registered in England & Wales No. 6750892		ISO 9001 Quality Manager ISO 14001 Environmental M ISO 45001 Occupational He	

Tools for Installation

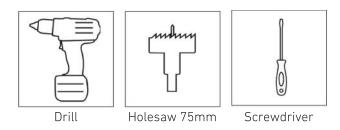


1

 Cut 75mm diameter hole in ceiling




Insert luminaire, ensure 100mm clearance between luminaire and insulation. DO NOT

COVER DRIVER.

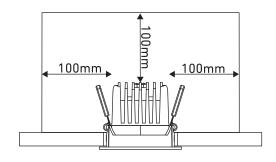

2


Make electrical connections to driver.

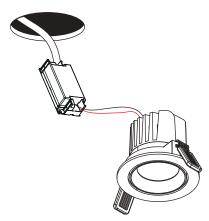

See next page for wiring details.

4

Turn on power.

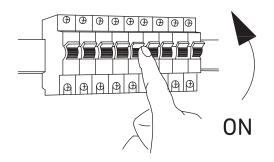


Light Forms	LightForms.com	8 Richfield Avenue	Т	+44 (0)20 8571 3785
UK Head Office		Reading	E	London@
		RG1 8EQ		LightForms.com

ISO 9001Quality ManagementISO 14001Environmental ManagementISO 45001Occupational Health & Safety Management

Carina Small 86 Downlight


Installation / Maintenance Instructions

•Wiring Diagram for Non Dimmable Driver

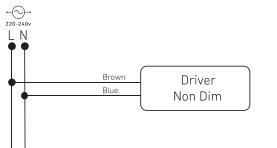



•Wiring Diagram for Phase Cut Driver


LIGHTFORMS

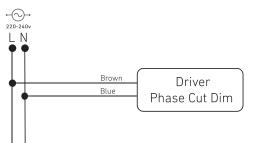

• Wiring Diagram for DALI dimming Driver

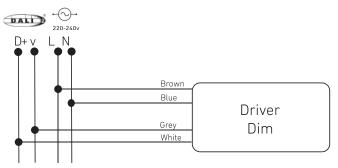

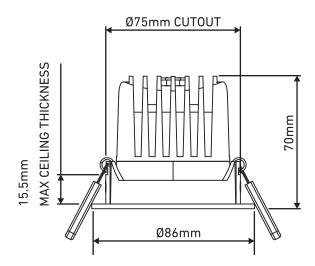


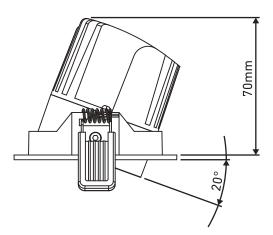

Light Forms UK Head Office	LightForms.com	8 Richfield Avenue Reading RG1 8EQ	T E	+44 (0)20 8571 3785 London@ LightForms.com
Registered in England & Wales		ISO 9001 Quality Management		

ISO 9001 Quality Management ISO 14001 Environmental Management

ISO 45001 Occupational Health & Safety Management

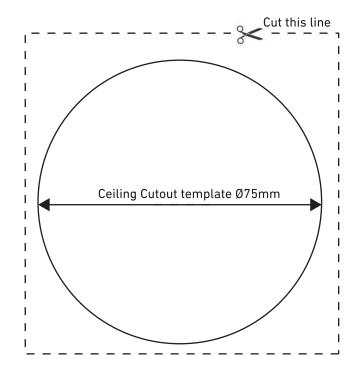

Light Forms UK Head Office	LightForms.com	8 Richfield Reading RG1 8EQ	d Avenue	T	+44 (0)20 8571 3785 London@ LightForms.com
Registered in England & Wales No. 6750892		ISO 9001 ISO 14001 ISO 45001	Quality Management Environmental Manager Occupational Health & S		Management