
Carina Small 86 IP65 Downlight Installation / Maintenance Instructions

LIGHTFORMS

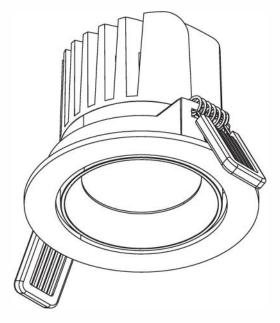

CAR86-IP65-DL

Precautions and Warnings

- •Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use.
- •Turn off the power suppler before installation and maintenance.
- •Installation must be carried out be a trained professional in accordance with all National electrical' codes and regulations.
- •To avoid the risk of fire and overheating, make sure all connection, including those made by others, are correct and secure.
- •Do not pinch or apply excessive tension on the electrical wires. Damage due to improper handling and installation will void the warranty.
- •If there is any damage to the product or the cable, the product must be returned to the retailer or manufacturer.





Luminaire Details

Power Supply:	230V AC 50Hz
IP Rating:	IP65
Class:	
Ta Max:	45°C

Fixing Method:	Spring clip
Bezel Diameter:	86mm
Recess Depth:	80mm
Ceiling cutout	75mm
Ceiling Thickness range:	1-15.5mm

Light Forms LightForms.com UK Head Office	8 Richfield Avenue Reading RG1 8EQ	T +44 (0)20 8571 3785 E London@ LightForms.com
---	--	--

 
Carina Small 86 IP65 Downlight

Installation / Maintenance Instructions

LIGHT FORMS

Tools for Installation








Screwdriver




 Cut 75mm diameter hole in ceiling






Insert luminaire, ensure 100mm clearance between luminaire and insulation. DO NOT COVER DRIVER.

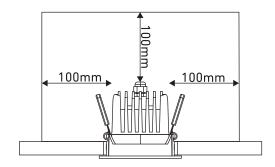




Make electrical connections to driver.

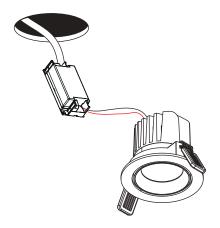

4

Turn on power.

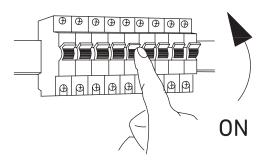

See next page for wiring details.

Light FormsUK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ T +44 (0)20 8571 3785

E London@ LightForms.com


Quality Management
Environmental Management
Occupational Health & Safety Management

Carina Small 86 IP65 Downlight


Installation / Maintenance Instructions

LIGHT FORMS


• Wiring Diagram for Non Dimmable Driver

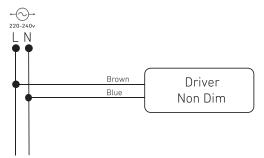



•Wiring Diagram for Phase Cut Driver

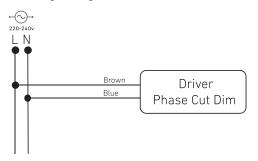

· Wiring Diagram for DALI dimming Driver

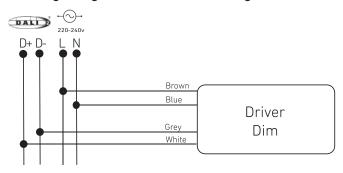

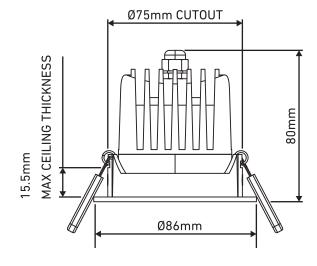

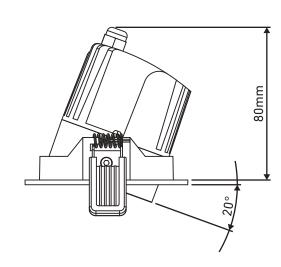

Light FormsUK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ T +44(0)2085713785

E London@ LightForms.com

Quality Management Environmental Management Occupational Health & Safety Management

