

Precautions & Warnings!

- Read all instructions carefully, the safety of this product is only guaranteed if the instruction are followed, retain these instructions for future use
- Turn Off the power supply before installation and maintenance
- Installation must be done by trained professional and in accordance with National electrical code & regulations.
- To avoid the risk of fire and overheating, make sure all connections are made properly.
- Don't pinch or apply excessive tension on electrical wires.Damages due to improper handling and installation will void the warranty.

 


 
Luminaire Details

Power Supply	220-240V AC
Engine IP Rating:	IP 54
Driver IP Rating:	IP 20
Class:	
Ta Max:	40°C

Fixing Method:	Wing
Bezel Diameter:	96 mm
Recessed depth:	111 mm
Ceiling cut-out:	90 mm
Ceiling thickness Range:	1-25 mm

Tools For Installation








Screw Driver

Light Forms.com

353/9 Dr Hira Singh Road Civil Lines, Ludhiana 141001 Punjab, India

ARA Medium Fixed Downlight Installation /Maintanence Instructions


LIGHTFORMS

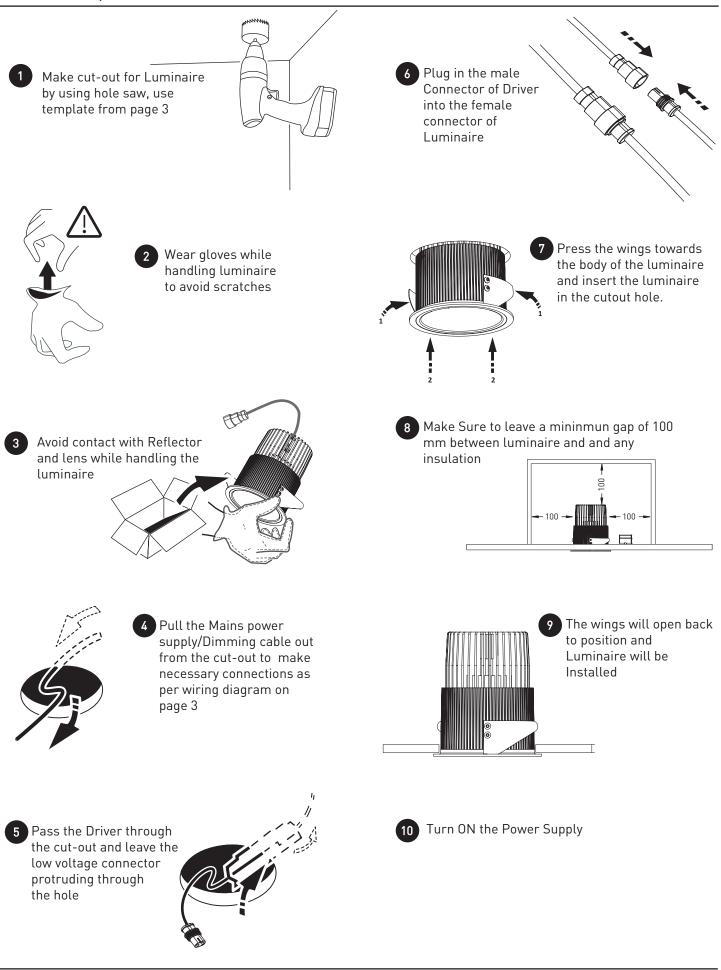


353/9 Dr Hira Singh Road Civil Lines, Ludhiana 141001 Punjab, India

Cut on this line


• Wiring Diagram for Non Dimmable Driver

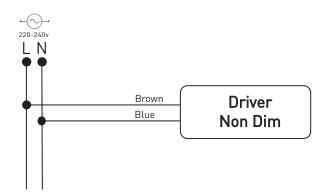

• Wiring Diagram for Dali dimming Driver

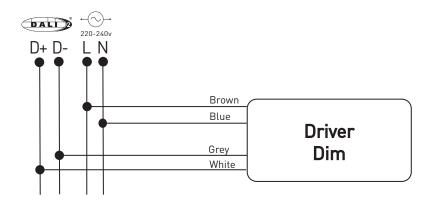

Dimension's & Template

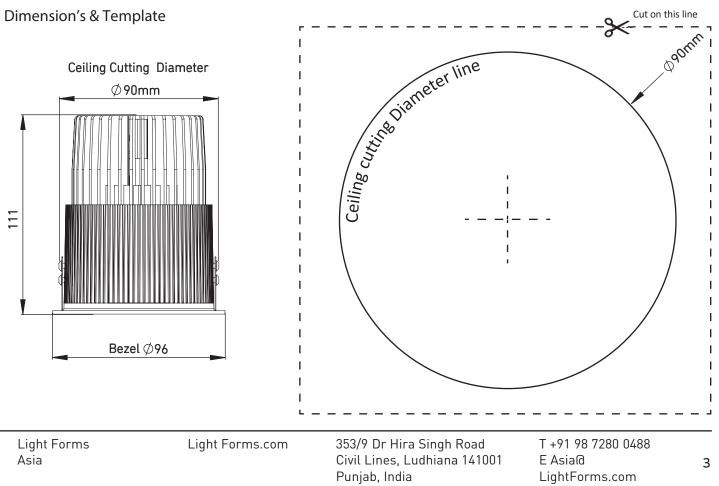

• Wiring Diagram for Phase Cut Driver

