


## **Precautions & Warnings!**

- Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use
- Turn Off the power supply before installation and maintenance
- Installation must be done by trained professional and in accordance with National electrical code & regulations.
- To avoid the risk of fire and overheating, make sure all connections are made properly.
- Don't pinch or apply excessive tension on electrical wires. Damages due to improper handling and installation will void the warranty.

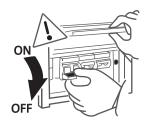




## Luminaire Details


Power Supply.	220-240V AC
Engine IP Rating:	IP 54
Driver IP Rating:	IP 20
Class:	
T <sub>a</sub> Max:	40°C

Fixing Method:	Spring Clip
Bezel Size:	116x116 mm
Recessed depth:	127 mm
Ceiling cut-out:	105x105 mm
Ceiling thickness Range:	1-25 mm


## **Tools For Installation**



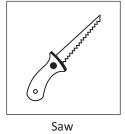

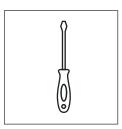

Screw Driver

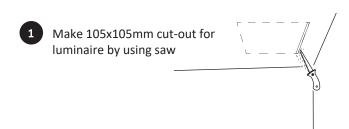


6 Plug in the female connector of driver into the male connector of luminaire




Wear gloves while handling luminaire to avoid scratches



Rotate the spring clips as shown and pass the luminaire through the cut-out

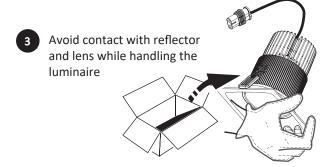


 8 Make sure to leave a minimun gap of 100 mm between luminaire and any insulation






Pull the mains power supply/dimming cable out from the cut-out to make necessary connections as per wiring diagram on page 3

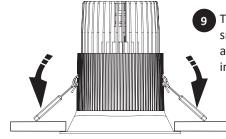


The spring clips will snap back to position and luminaire will be installed

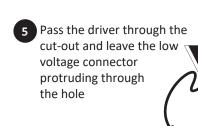


10 Turn ON the power supply


• Wiring Diagram for Non Dimmable Driver

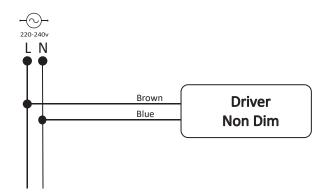


• Wiring Diagram for Phase Cut Driver

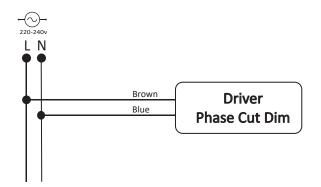


• Wiring Diagram for Dali dimming Driver

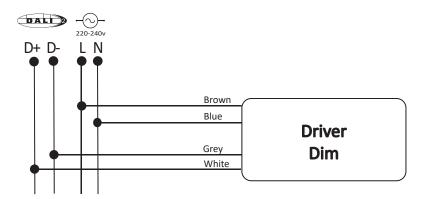

• Dimension's & Template

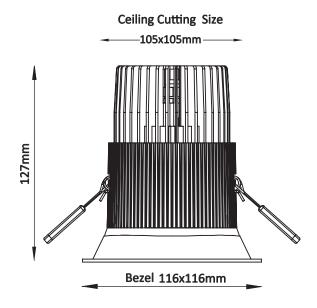

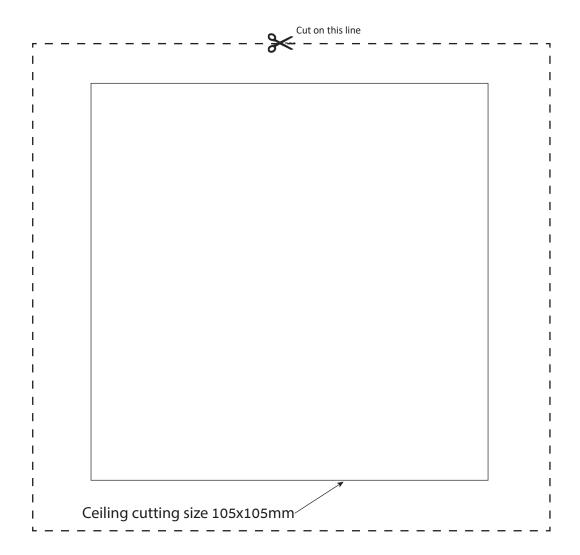

India