

EM-00004

Precautions and Warnings

- •Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use.
- •Turn off the power suppler before installation and maintenance.
- •Installation must be carried out be a trained professional in accordance with all National electrical' codes and regulations.
- •To avoid the risk of fire and overheating, make sure all connection, including those made by others, are correct and secure.
- •Do not pinch or apply excessive tension on the electrical wires. Damage due to improper handling and installation will void the warranty.
- •If any there is any damage to the product or the cable, the product must be returned to the retailer or manufacturer.





Electrical Specification

Class:	Class 2 🔲
Input power (MAX):	3.5W
Frequency:	50/60Hz
Input voltage:	200-240V
Discharge efficiency:	≥80%
Output power:	1.8W ±0.3W
Power factor:	≥0.3%

≤0.03A
DC2.8-3.2V
580mA±10%
0.5KV
AC3750V
Pass
Pass

Light Forms UK Head Office	LightForms.com	8 Richfield Avenue Reading RG1 8EQ	Ε	+44 (0)20 8571 3785 London@ LightForms.com
				3

Emergency Recessed

Installation / Maintenance Instructions

LIGHT FORMS




Cut suitable hole in ceiling. Note hole sizes if using 80mm or 140mm bezel accessory. Standard - Ø42-50mm

D80 Bezel - Ø66-70mm D140 Bezel - Ø85-105mm




2

Attached larger bezel accessory if using.

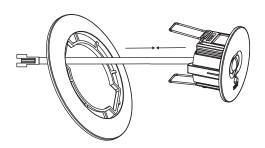

3

Make electrical connections to driver. See wiring diagram on next page.

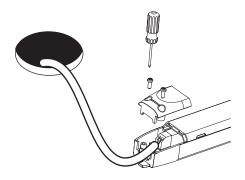


Wire diameters: 0.5-0.75mm²

Light Forms Light Forms.com




Connect the battery, and the luminaire and pass into the ceiling.

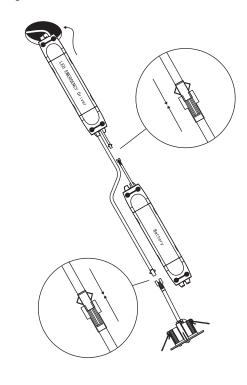


5

Insert luminaire into the ceiling.

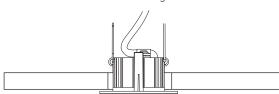

6

Turn on power.

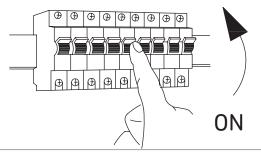


8 Richfield Avenue

Reading RG1 8EQ T +44 (0)20 8571 3785


E London@ LightForms.com


UK Head Office

Quality Management
Environmental Management
Occupational Health & Safety Management

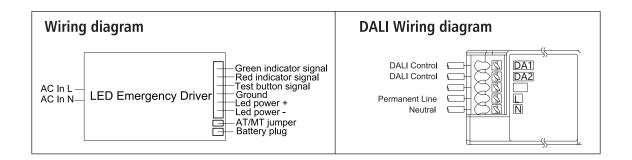

Dimensions

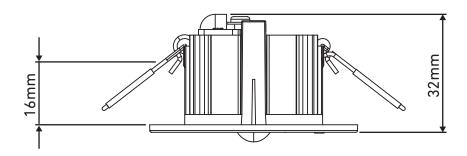

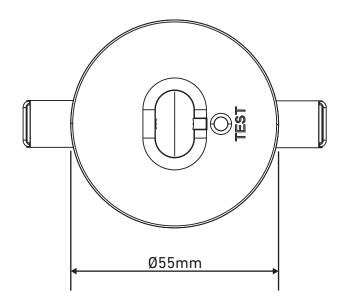

Light FormsUK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ T +44(0)2085713785

E London@ LightForms.com


Quality Management Environmental Management Occupational Health & Safety Management

Emergency Recessed Installation / Maintenance Instructions

LIGHT FORMS

Instructions for Automatic Testing

- •Once the unit is powered up, a self diagnostics test will run automatically.
- •Note the Status Indicator and Status from the table below.
- •When the fault is corrected, press the test button for two seconds. The Red indicator will turn Green.
- •It is possible to use the Test Button to perform manual tests.
- •Run three Min duration test every month.
- •Run one hour or three hour duration test every year.

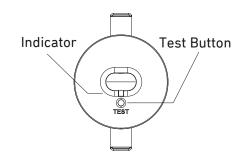

AUTO Test

Green: Solid:	System 0K
Red: Solid:	Requires Service
Green: one flash, 4s pause:	Battery disconnected
Green: two flash, 4s pause:	Low battery voltage
Green: three flash, 4s pause:	Charge board fault
Green: four flash, 4s pause:	AC/DC transfer fault
Green: five flash, 4s pause:	LED lamp fault

MANUAL Test

Press test button once:	Run a 30s duration test
Press test button twice in 2s:	Run a three Min duration test
Press test button three times in 2s:	Run a 30 Min duration test
Press test button three times in 2s:	Run a one hour or three hour duration test
Press and hold test button for 2s	Fault clear and reset

DALI Test

Green: Solid:			System 0K
Green: 0.1s flash, 0.1s pause: Green: 1s flash, 1s pause:			Function test underway
			Duration test underway
Red: Solid:			Load failure
Red: 0.1s flash, 0.1s pau	ıse:		Battery failure
Red: 1s flash, 1s pause:			Charging Failure
Green: Double Pulse:			Inhibit Mode
Green and Red: OFF			Emergency Mode
Light Forms UK Head Office	LightForms.com	8 Richfield Avenue Reading RG1 8EQ	T +44 (0)20 8571 3785 E London@ LightForms.com