
## Nova Small 50 Trackspot

### Installation / Maintenance Instructions

#### LIGHTFORMS

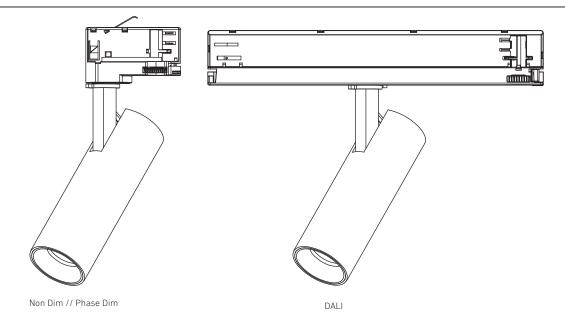

TS-00001

#### Precautions and Warnings

- •Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use.
- •Turn off the power suppler before installation and maintenance.
- •Installation must be carried out be a trained professional in accordance with all National electricals' codes and regulations.
- •To avoid the risk of fire and overheating, make sure all connection, including those made by others, are correct and secure.
- •Do not pinch or apply excessive tension on the electrical wires. Damage due to improper handling and installation will void the warranty.
- •If any there is any damage to the product or the cable, the product must be returned to the retailer or manufacturer.





#### Luminaire Details

Power Supply:	230V AC 50Hz
IP Rating:	IP20
Class:	<b>=</b>
Ta Max:	45°C

Fixing Method:	Track adaptor
Diameter:	50mm
Length:	148mm

Light Forms
UK Head Office


## Nova Small 50 Trackspot


## Installation / Maintenance Instructions

#### **LIGHT FORMS**




Release locking tab.








Insert into track. Note the orientation.

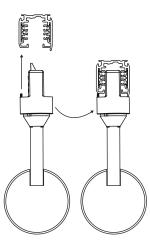




Lock the fixture to the track.

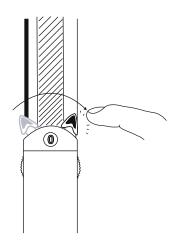




Select the electrical circuit

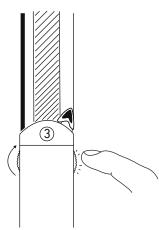




Adjust.

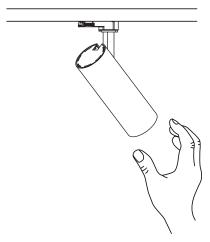



Turn on power.

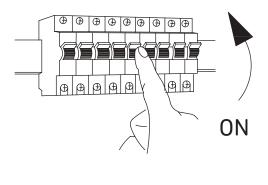

**Light Forms**UK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ T +44 (0)20 8571 3785

E London@ LightForms.com

Quality Management Environmental Management Occupational Health & Safety Management


# Nova Small 50 Trackspot

## Installation / Maintenance Instructions

#### **LIGHT FORMS**




Release locking tab.

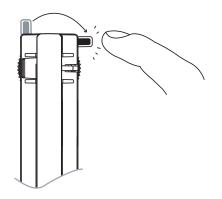




Select the electrical circuit

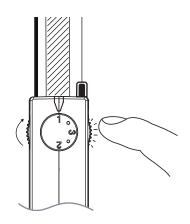




Insert into track. Note the orientation and guide pins.






Adjust.

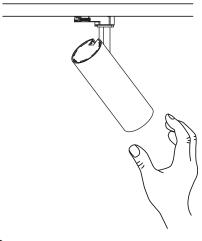




Lock the fixture to the track.

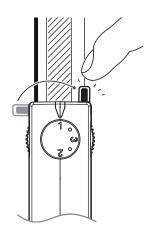



Turn on power.

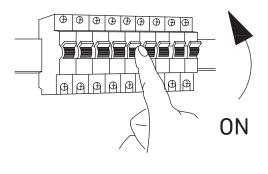

**Light Forms**UK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ T +44 (0)20 8571 3785

E London@ LightForms.com

Quality Management Environmental Management Occupational Health & Safety Management